



H2PRO by RHG Products

5-Stage RO/DI User Manual


RHG Products Company

www.rhgproducts.com

303-663-1779


H2PRO System Layout

H2Pro 110v

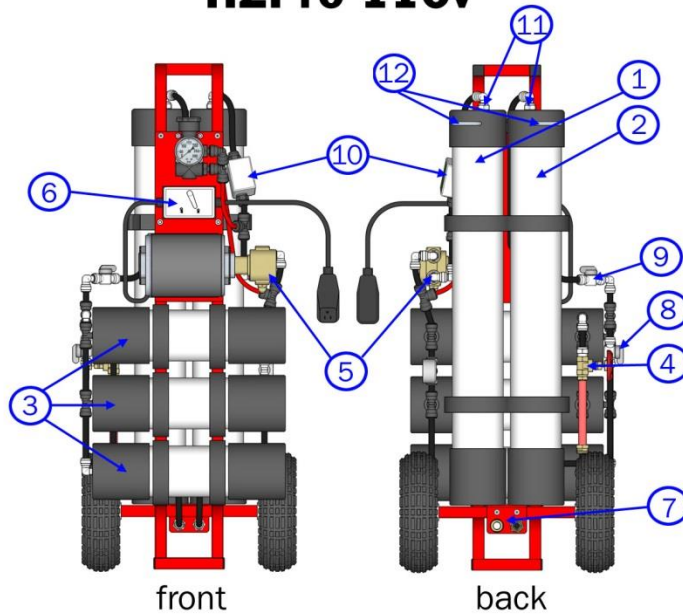

1. Carbon Filter
2. DI Filter
3. RO Filter
4. Bypass Valve
5. Pump
6. On/Off Switch
7. Inlet/Outlet
8. RO Only Valve
9. DI Valve
10. Water Meter
11. Filter Housing Insert
12. U-Pin

H2Pro 12v

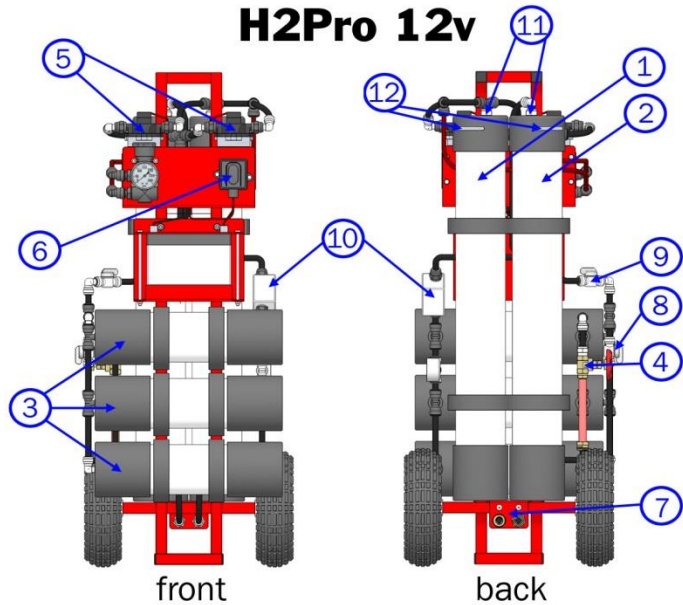

RHG Products Company

www.rhgproducts.com

303-663-1779

New Machine Setup Procedure

- 1. Unpack unit and inspect for any damage that may have occurred during shipping.**
- 2. Any damage or missing components must be reported within 24 hours to the supplier of your system.**

H2Pro Systems ship fully assembled.

- 3. Remove any plugs with attached tags and follow the instructions on the tag. (Step 4) Do not turn on any pumps at this time.**
- 4. Thoroughly flush your carbon filter under normal tap pressure before connecting to any other filters.**

•TIP: Plugs are inserted by RHG at points which allow carbon filters to be flushed from a short length of hose. Point this hose in a safe direction while flushing.

(BLACK WATER!)

- 5. Connect loose tube in place of plugs to connect carbon/pump outlets.**

RHG Products Company

www.rhgproducts.com

303-663-1779

Operation Instructions

- 1. (Optional) Connect a length of hose* to the bypass hose to divert waste water away from system and work area.**
- 2. Fully open bypass waste valve.**
- 3. Attach a garden hose to the inlet of your system.**
- 4. Turn tap water supply on.**
- 5. As water begins to flow out of the bypass hose, slowly close the bypass valve all the way. Although the valve is fully closed, water will still flow out of it. This is normal. Water will begin to flow out of the system outlet.**
- 6. It will take a few minutes for all of the air to purge out of your system. Only turn on pumps after air has been purged.**
- 7. After the initial 'air purge' you will not need to purge air again unless you replace a filter.**
- 8. You are now fully operational.**

***extension hose not included**

RHG Products Company

www.rhgproducts.com

303-663-1779

Features and Maintenance

H2Pro Pure Water Systems come equipped with a RO Only feature and a water meter.

RO Only Option

RO filters greatly reduce water TDS without the aid of DI filters. Under pump pressure this reduction will be greater than under tap pressure. Windows can be washed spot free with water up to 10ppm TDS. Non-Glass surfaces can typically be washed with water up to 40ppm TDS.

- 1. To run your system in RO Only Mode open the 1/2" grey valve labeled 'R.O.' and close the 1/2" grey valve labeled 'D.I.'**
- 2. If the system is not producing water of acceptable purity in RO Only Mode for your application switch to DI mode by closing the 1/2" grey valve labeled 'R.O.' and opening the 1/2" grey valve labeled 'D.I.'**

ALWAYS BE SURE AT LEAST ONE GREY VALVE IS OPEN DURING PRODUCTION

**** PREVENT TDS CREEP AND EXTEND DI LIFE ****

For a few moments after RO membranes begin production, they fail to reject the percentage of dissolved solids they are designed to. Each time you start your system, run it in RO Only mode until your RO membranes "warm up" and are reducing product water TDS by about 90%. If you now need to clean with pure water, switch to D.I. mode.

See attached instruction sheet for water meter operation.

RHG Products Company

www.rhgproducts.com

303-663-1779

Filter Replacement Schedule & Procedure

Your carbon filter protects your system from damaging chlorine and water disinfection agents. It is recommended that you change your carbon filter cartridge every 6 months. Failure to do so will void your warranty. Order RHG #20066-C.

Your DI filter has a limited lifespan based on the amount of dissolved solids it is removing from the water. DI filter cartridges need to be replaced as needed for your cleaning application. Order RHG #20066-D.

To change your filter cartridge, first disconnect any hoses from the elbow in the insert at the top of the filter housing. Remove the stainless steel U-Pin. Depress the insert into the housing *slightly*. Pull the insert out. Generation 3 filter plugs can be pried out using the stainless U-Pin. Remove the spent filter cartridge and replace. Reassemble filter housing and reconnect hoses. Flush new carbon filter cartridge if needed.

RO membranes have a much longer service life and in the experience of RHG may last the life of the system. However ROs are only warrantied for factory defect and may eventually diminish in performance or fail. If you experience a reduction in RO performance in your H2Pro system, contact RHG directly to troubleshoot.

RO MEMBRANES SHOULD NOT BE ALLOWED TO DRY OR COLLECT STAGNANT WATER IN THE BOTTOM OF THE MEMBRANE. THIS WILL DIMINISH PERFORMANCE, POTENTIALLY TO THE POINT OF FAILURE. TO PREVENT THIS, ROs SHOULD BE RUN ON A REGULAR BASIS, AT LEAST EVERY TWO WEEKS, AFTER FIRST USE, EVEN DURING "OFF-SEASON".

RHG Products Company

www.rhgproducts.com

303-663-1779

Electric Motor Operation

H2Pro RO/DI systems come with electric pumps to boost water production in 12v and 110v models. An on/off switch is mounted to the face of both systems. 110v models come with a GFCI with TEST and RESET buttons, an electric motor and pump. Simply connect to power to run pump. 12v models come with dual pumps. RHG wires the pumps to the included 12v, deep cycle, 35 amp hour battery. The battery will typically provide 3.5 – 4 hours of continuous service, after which it will have to be recharged by a generator, battery charger, or vehicle.

Shutdown Procedure

- 1. Open the bypass valve fully to flush the system.**
- 2. Flush the system for 4 to 5 minutes at the end of the job. We recommend that you do this while coiling up your hoses and putting away your pole. (it is otherwise hard to wait the entire 4 to 5 mins for a good flush)**
- 3. Turn off the water supply to the unit.**
- 4. Disconnect the water supply.**

It is important to always flush the system after each use. Failure to do so will decrease the filters life.

RHG Products Company

www.rhgproducts.com

303-663-1779